




# TOTO® NEOREST II Accessories

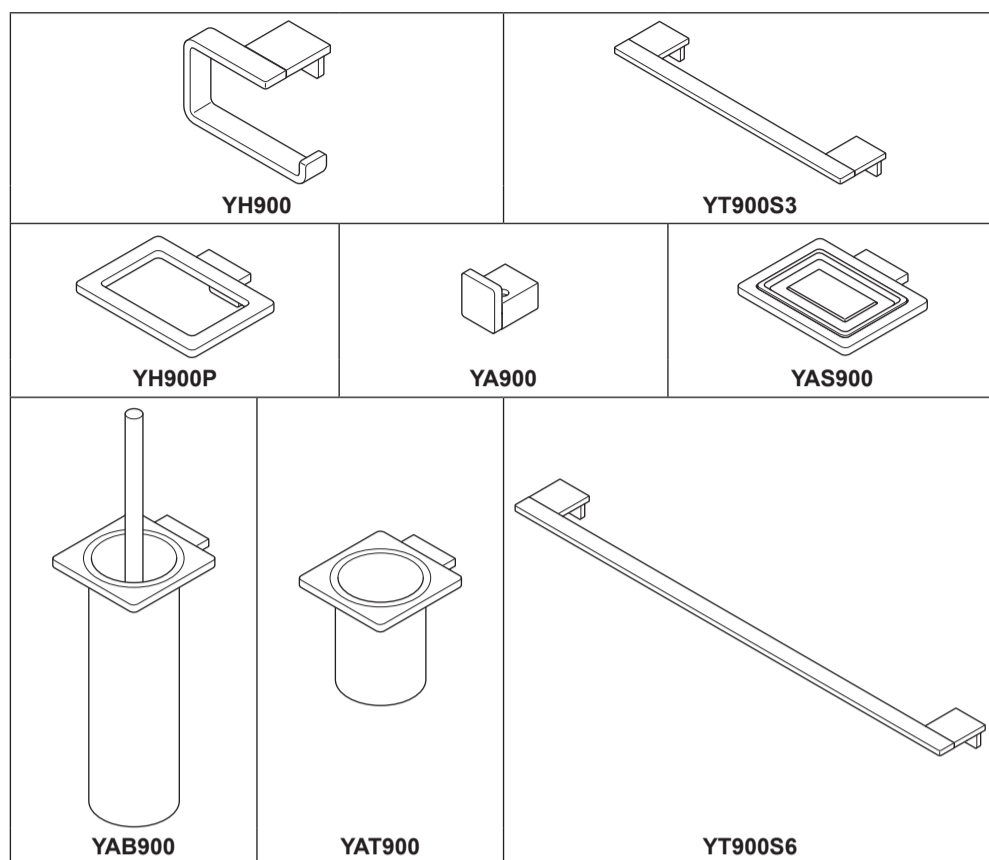

## Included parts

		
YA900 YAB900 YAS900 YAT900 YH900 YH900P	2	2
YT900S3 YT900S6	4	4


## Cautions and warnings

Danger	Gefahr
<ul style="list-style-type: none"> <li>• YAS900: Do not put items weighing 3 kg or more on top of these parts.</li> <li>• Do not hang items weighing 3 kg or more on the part.</li> <li>• Do not use any of the products as rails or handlebars.</li> <li>• After attaching each product, confirm that it is attached tightly.</li> </ul>	<ul style="list-style-type: none"> <li>• YAS900: Stellen Sie auf diese Teile keine Gegenstände, die 3 kg oder mehr wiegen.</li> <li>• Hängen Sie an dieses Teil keine Gegenstände, die 3 kg oder mehr wiegen.</li> <li>• Benutzen Sie diese Produkte nicht als Handlauf oder Griff.</li> <li>• Vergewissern Sie sich nach dem Anbringen jedes Produkts dass dieses auch fest angebracht ist.</li> </ul>
Danger	Pericolo
<ul style="list-style-type: none"> <li>• YAS900: Ne placez aucun objet de 3 kg ou davantage sur ces pièces.</li> <li>• N'accrochez aucun objet de 3 kg ou davantage à cette pièce.</li> <li>• N'utilisez aucun produit, notamment des rails ou des poignées.</li> <li>• Après avoir fixé chaque produit, vérifiez s'il est solidement attaché.</li> </ul>	<ul style="list-style-type: none"> <li>• YAS900: Non collocare oggetti di peso pari o superiore a 3 kg sopra questi prodotti.</li> <li>• Non appendere oggetti di peso pari o superiore a 3 kg a questo prodotto.</li> <li>• Non utilizzare i prodotti come guide o maniglie di appoggio.</li> <li>• In seguito all'installazione di ciascun prodotto, verificare che sia ben fissato.</li> </ul>
危險	危險
<ul style="list-style-type: none"> <li>• YAS900: 請勿將重量為3kg或以上的物件放在這些部件上方。</li> <li>• 請勿將重量為3kg或以上的物件懸吊在這些部件上方。</li> <li>• 請勿將任何產品用作扶手或把手。</li> <li>• 安裝各產品後，請確認其已牢固安裝。</li> </ul>	<ul style="list-style-type: none"> <li>• YAS900: 請勿將重量為3kg或以上的物件放在這些部件上方。</li> <li>• 請勿將重量為3kg或以上的物件懸吊在這些部件上方。</li> <li>• 請勿將任何產品用作扶手或把手。</li> <li>• 安裝各產品後，請確認其已牢固安裝。</li> </ul>

## Cleaning the accessories



<p><b>■ Daily cleaning</b> Wipe with a cloth that has been dampened with cool or lukewarm water and wrung out well.</p> <p><b>■ Cleaning when very dirty</b> After wiping with a soft cloth dampened with diluted kitchen cleanser (pH neutral), wipe with water and then with a dry cloth and otherwise completely wipe away moisture.</p> <p><b>■ Precautions when cleaning</b> Do not use the following items because they could damage the surface of the product.</p> <ul style="list-style-type: none"> <li>• Acidic detergents, bleaches, alkaline detergents</li> <li>• Solvents like thinner and benzene</li> <li>• Detergents containing coarse particles, like abrasive powders</li> <li>• Nylon scrubbers and brushes, etc.</li> </ul>	<p><b>■ Tägliche Reinigung</b> Wischen Sie es mit einem Tuch ab, das zuvor in kaltes oder lauwarmes Wasser getaucht und gut ausgewrungen wurde.</p> <p><b>■ Reinigung bei starker Verschmutzung</b> Reiben Sie es zunächst mit einem weichen Tuch und verdünntem Küchenreiniger (pH-neutral) ab, wischen Sie es danach mit Wasser ab und trocknen Sie es mit einem trockenen Tuch.</p> <p><b>■ Vorkehrungen bei der Reinigung</b> Benutzen Sie die folgenden Gegenstände nicht, da sie die Oberfläche oder das Produkt selbst beschädigen könnten.</p> <ul style="list-style-type: none"> <li>• Säurehaltige Reinigungsmittel, Bleichmittel, basische Reinigungsmittel</li> <li>• Lösungsmittel wie etwa Verdünnungsmittel oder Waschbenzin</li> <li>• Reinigungsmittel, die grobkörnige Partikel enthalten, wie z.B. Scheuermittel</li> <li>• Nylonschrubber und -bürsten etc.</li> </ul>
<p><b>■ Nettoyage quotidien</b> Essuyez avec un tissu trempé dans l'eau froide ou tiède, et bien tordu.</p> <p><b>■ Nettoyage en présence de saletés tenaces</b> Après avoir essuyé avec un tissu doux humidifié avec du nettoyant ménager dilué (pH neutre), essuyez à l'eau, puis avec un tissu sec afin d'éliminer complètement toute trace d'humidité.</p> <p><b>■ Précautions lors du nettoyage</b> N'utilisez aucun élément de la liste suivante, car ils risqueraient d'endommager le produit.</p> <ul style="list-style-type: none"> <li>• Détergents acides, eau de javel, détergents alcalins</li> <li>• Solvants tels que diluant et benzène</li> <li>• Détergents contenant de grosses particules, notamment les poudres abrasives</li> <li>• Tampons de nettoyage et brosses en nylon, etc.</li> </ul>	<p><b>■ Pulizia quotidiana</b> Pulire con un panno inumidito con acqua fredda o tiepida e ben strizzato.</p> <p><b>■ Pulizia in caso di sporco ostinato</b> Dopo aver passato un panno morbido imbevuto con una soluzione diluita di detergente da cucina (pH neutro), passare un panno asciutto di sola acqua e quindi un panno asciutto, eliminando tutte le tracce di umido.</p> <p><b>■ Precauzioni per la pulizia</b> Non utilizzare i seguenti prodotti o sostanze, in quanto potrebbero danneggiare la superficie del prodotto.</p> <ul style="list-style-type: none"> <li>• Detergenti acidi, candeggina, detergenti alcalini</li> <li>• Solventi e benzene</li> <li>• Detergenti contenenti particelle ruvide, come polveri abrasive</li> <li>• Spugnette di nylon, spazzole, ecc.</li> </ul>
<p><b>■ 日常清潔</b> 請用蘸有冷水或溫水並攪干的布進行擦拭。</p> <p><b>■ 當非常髒時，請進行清潔</b> 在用蘸有稀釋過的廚房清潔劑（中性pH值）的軟布進行擦拭後，然後用水擦拭，接著用干布擦乾，否則無法完全擦去濕氣。</p> <p><b>■ 清潔時的注意事項</b> 請勿使用下列項目，因為可能會損壞產品表面。</p> <ul style="list-style-type: none"> <li>• 酸性清潔劑、漂白、鹼性清潔劑</li> <li>• 稀釋劑和苯等溶劑</li> <li>• 包含研磨粉等粗顆粒的清潔劑</li> <li>• 尼龍球和刷子等</li> </ul>	<p><b>■ 日常清潔</b> 請用蘸有冷水或溫水並攪乾的布進行擦拭。</p> <p><b>■ 當非常髒時，請進行清潔</b> 在用蘸有稀釋過的廚房清潔劑（中性pH值）的軟布進行擦拭後，然後用水擦拭，接著用乾布擦乾，否則無法完全擦去濕氣。</p> <p><b>■ 清潔時的注意事項</b> 請勿使用下列專案，因為可能會損壞產品表面。</p> <ul style="list-style-type: none"> <li>• 酸性清潔劑、漂白、鹼性清潔劑</li> <li>• 稀釋劑和苯等溶劑</li> <li>• 包含研磨粉等粗顆粒的清潔劑</li> <li>• 尼龍球和刷子等</li> </ul>

## Installation procedures

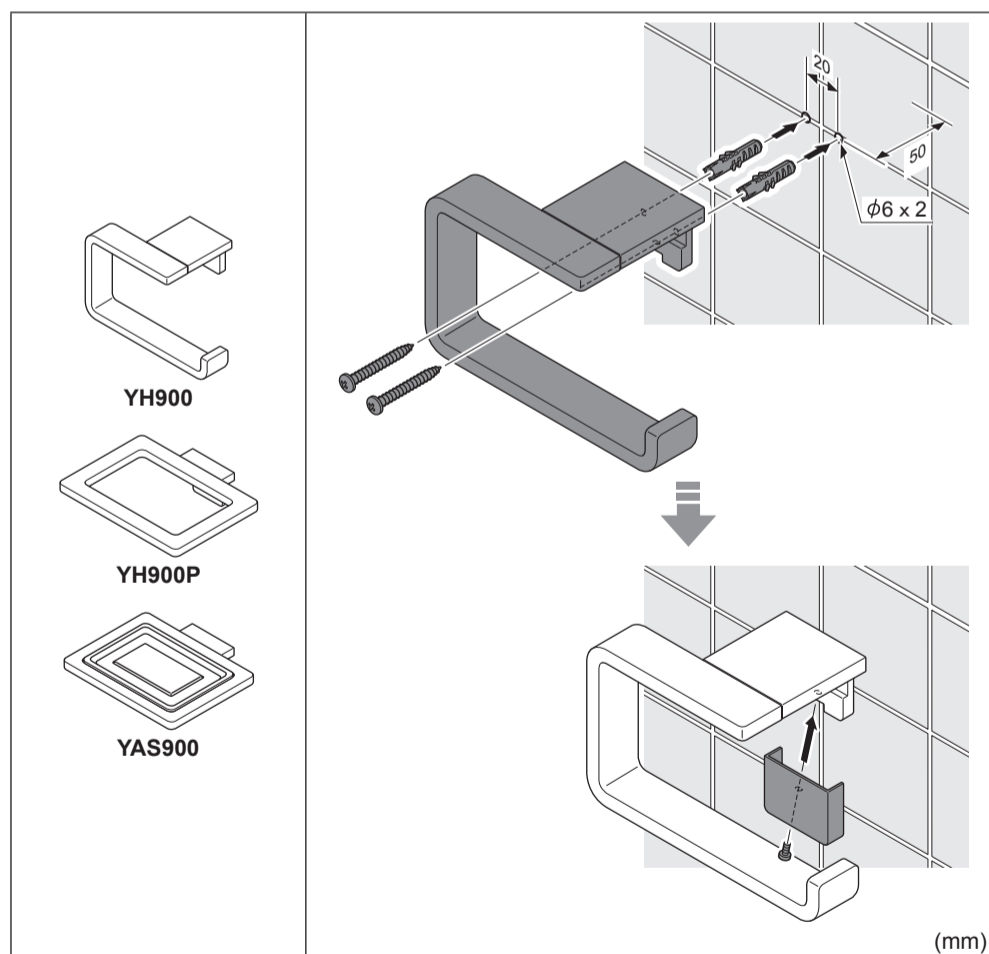

(mm)

## Installation procedures

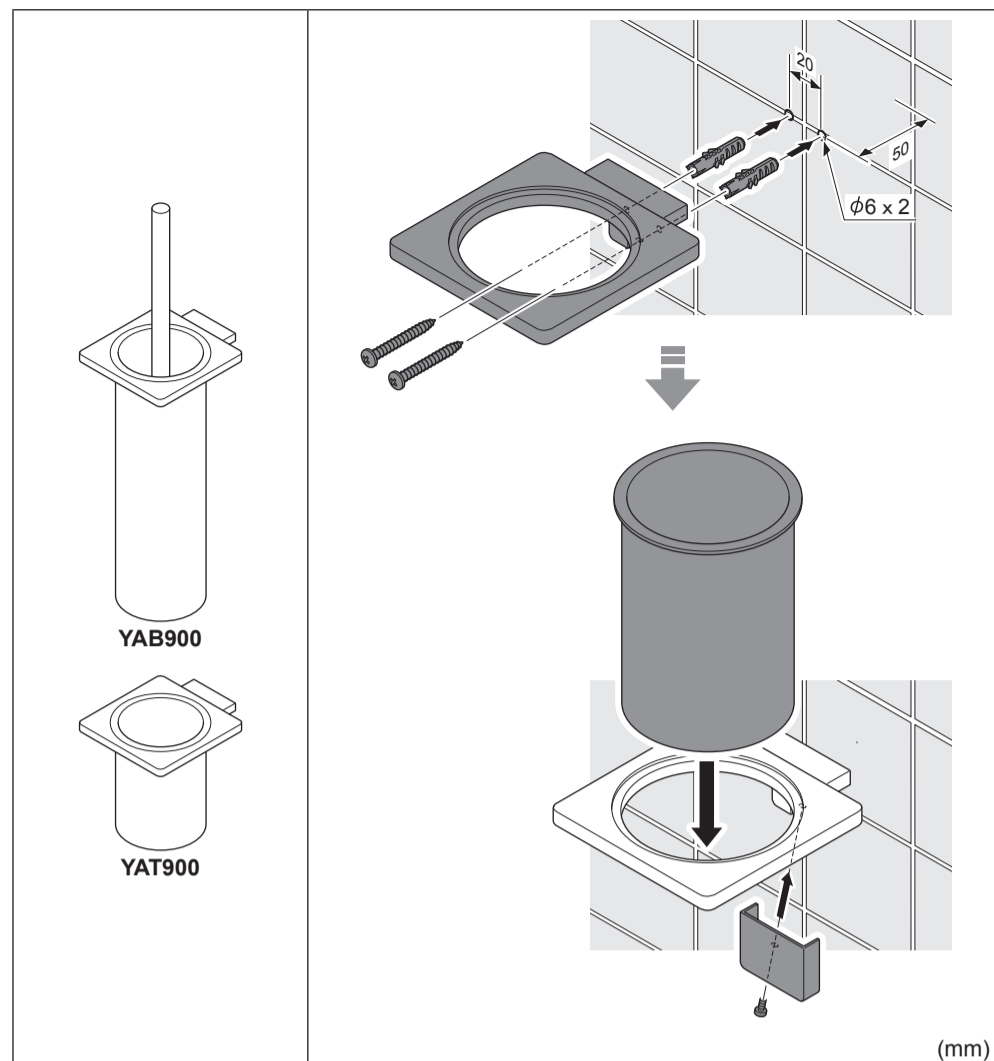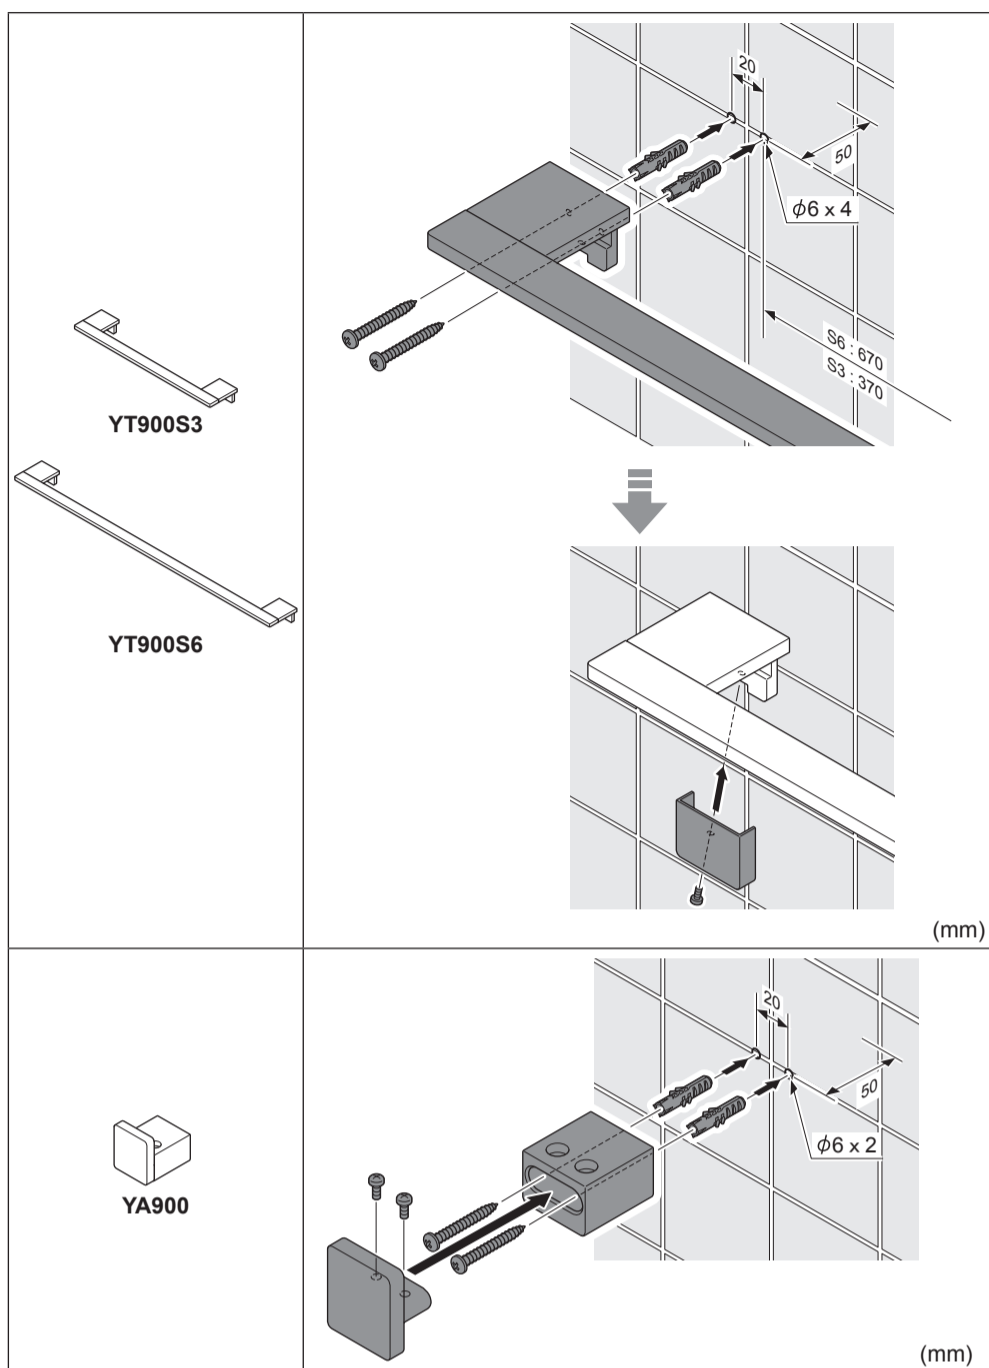

## Repair parts

<p><b>YP900-19</b></p> <p>Replacement brush Ersatzbürste Brosse de rechange Spazzola di ricambio 替换用刷子 替换用刷子</p>	
1	

## Warranty

### LIMITED TWO YEARS WARRANTY

- TOTO warrants its products to be free from manufacturing defects under normal use and service for a period of two (2) years from the date of purchase. This warranty is extended only to the ORIGINAL PURCHASER.
- TOTO's obligations under this warranty are limited to repair or replacement, at TOTO's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with this OWNER'S MANUAL. TOTO reserves the right to make such inspections as may be necessary to determine the cause of the defect. TOTO will not charge for labor or parts in connection with warranty repairs or replacements.  
**TOTO is not responsible for the cost of removal, return and/or reinstallation of products.**
- This warranty does not apply to the following items:
  - Damage or loss sustained in a natural calamity such as fire, earthquake, flood, thunder, electrical storm, etc.
  - Damage or loss resulting from any unreasonable use, misuse, abuse, negligence, or improper maintenance of the product.
  - Damage or loss resulting from removal, improper repair, or modification of the product.
  - Damage or loss resulting from sediments or foreign matter contained in a water system.
  - Damage or loss resulting from improper installation or from installation of a unit in a harsh and/or hazardous environment.
- This warranty gives you specific legal rights. You may have other rights which vary from country to country.
- To obtain warranty repair service under this warranty, you must take the product or deliver it prepaid to a TOTO service facility, together with a letter stating the problem, or contact a TOTO distributor or product service contractor, or directly to TOTO sales office. If, because of the size of the product or nature of the defect, the product can not be returned to TOTO, receipt by TOTO of written notice of the defect shall constitute delivery. In such case, TOTO may choose to repair the product at the purchaser's location or pay to transport the product to a service facility.

THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY TOTO. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE PURCHASER. TOTO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE OR EXPENSES INCURRED BY PURCHASER, OR FOR LABOR OR OTHER COSTS DUE TO INSTALLATION OR REMOVAL, OR COSTS OF REPAIRS BY OTHERS, OR FOR ANY OTHER EXPENSE NOT SPECIFICALLY STATED ABOVE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR USE, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU.